IPV31

User Guide



IPV31

User Guide

Make a Call

- 1. Pick up the handset.
- 2. Enter a number, and then press the Call soft key.

Make a Call with a Headset

- Plug in headset and make sure the icon displays on the screen.
- 2. Press **Headset** (2) button.
- 3. Enter a number using the keypad and then press the **Call** soft key or the Headset **O** button

Make a Call with the Speakerphone

- 1. Press **Speakerphone**
- 2. Enter a number, and then press the **Call** soft key.

Answer a Call

Pick up the handset or if you are using the **speakerphone**, press button or **Call** soft key.

Put a Call on Hold

Press or the **Hold** soft key during an active call. To resume a held call, press button or the **Resume** soft key.

View Your Recent Calls

- 1. Press the **Call log** soft key when the phone is idle, press (a) or (v) button to or scroll through the list.
- 2. Select an entry from the list, and use the **Call** soft key to place the call.
- Press the **Delete** soft key to delete the entry from the list.

Transfer a Call to Another Person

- 1. From a call that is not on hold, press (-() button or the **Transfer** soft key.
- Enter the other person's phone number or press users BLF soft key if you that feature enabled.

Add Another Person to a Call

- From a connected call that is not on hold, press the Conference soft key.
- 2. Enter the number of the second party, and then press the **Call** soft key.
- Press the Conference soft key again when the second party answers. All parties are now joined in the conference.

Mute Your Audio

- 1. Press Mute 🚯 button.
- 2. Press **Mute** button again to turn mute off.

Listen to Your Voice Messages

The Message Waiting Indicator on the idle screen indicates that you have new voice messages waiting. The power indicator LED slow flashes red.

To listen to voice mail messages:

- 1. Press or dail *123
- 2. Follow the voice prompts to listen to your voice messages and enter your pin.

Call Forwarding

Press • to enable predefined call forward Press • to disable call forward

Adjust the Volume in a Call

Press **Volume** • left or right to adjust the handset, headset, or speakerphone volume, during a call.

Adjust the Ringtone Volume

Press **Volume** left or right to adjust the ringer volume when the phone is not in use.

Change the Ringtone

- Press the Menu soft key when the phone is idle, and then select Basic > Sound > Ring Tones.
- 2. Press () or () to select. the desired ring tone.
- 3. Press the Save soft key to accept the change.

Call Pickup

Lift Handset and press Call Pickup softkey, or dial *88.

Do Not Disturb mode

To enable **DO NOT DISTURB** press the **DND soft** key.

External Directory

- 1. Press the **Directory** soft key
- 2. Use (and buttons to scroll through the list
- 3. Select an entry fom the list and use the **Call** soft key to place the call.